



Turn ON/OFF - HOME Menu



- Press to turn ON.
- Keep pressed 2" to turn OFF.
- Press to go to the main MENU: HOME MENU.

Reset Hardware/Software



- With the meter turned on, keep the HOME key pressed for more than 10" to RESET, then turn the meter on again.



- With the meter turned off, keep the ENTER key pressed to turn on the meter, then release the ENTER key after the beep.

Navigation keys



- Press the arrow keys to navigate.



- Press ENTER to confirm.

Main MENU



- Press the HOME key.



- Press the arrow keys to select from the menus.



- Press ENTER to confirm.



- Select QUALITY to visualize the level and quality of the channels received.



- Select MEAS to carry out measurements.



- Select SPECT to visualize the spectrum.



- Select INGRES to access this function (only where available).



- Select PLAN to select the memory paln required: TV MASTER, MANUAL (MANUAL MEMORY) or AUTOMATIC (AUTO tv MEMORY).



- Select MEMORY or SCAN to access the MEMORY MENU functions.



- Select LEAKAGE to carry out these measurement (only where available).



- Select CONFIG to set the meter's parameters.

SPECTRUM



- Press SPECT to visualize the spectrum.
- Press again to activate the max. peak memory: MAX HOLD.

BARSCAN



- Press SPECT 2" to visualize the bar spectrum: BARSCAN.

QUALITY



- Press QUALITY to show the level and quality of the channels received.
- Press the UP and DOWN arrow keys to navigate in the channels.

MEASUREMENTS



1. Press QUALITY 2" to visualize the POWER (PWR) measurements, Noise Margin (MAR), QUALITY (QLY).
2. Press ENTER to visualize the aBER, bBER and MER measurements
3. Press ENTER to visualize the CONSTELLATION.

MEMORY MENU (MEMORY/SCAN)

AUTOMEMORY TV TO AUTOMATICALLY CREATE A MEMORY PLAN IN TV MODE.

- Press the HOME key | / | • Select MEMORY or SCAN
- Press ENTER to confirm
- Select **AUTOMEMORY TV** | • Press ENTER to confirm
- Select an automatic plan between AUTO 1 and AUTO 10 where the found channels will be memorized:



- Select the DISCOVERY mode required: **DISCOVERY: _ _ _ _**

TERR. ONLY = only terrestrial channels (analog + digit). Only where available.

TERR & CABLE = terr. channels (analog + digital) + cable TV (GAM). Only where available.

CABLE ONLY = analog terrestrial channels + cable TV (GAM). Only where available.

GAM-B ONLY, GAM-A ONLY, 8VSB ONLY, ALL MOD. Only where available.

- Select the minimum reference values for the search:
 - Analog channel level (LEVEL),
 - Digital channel power (POWER).

LEVEL:	> 50 dBuV
POWER:	> 50 dBuV
- Select **START ?** if the AUTO plan is free, or **OVERWRITE ?** if it is occupied.
- Press ENTER to start the search.

SAVE DATA LOGGER

- In the MEMORY MENU or SCAN select **LOGGER SAVE** then select the reference **PLAN** manual (MANU __) or automatic (AUTO __),
- Select the **LOG __** where you want to store the measurements.
Select **STORE ?** if the LOG is free or **OVERWRITE ?** if it is occupied.
- Press ENTER to carry out the LOGGER.

DC at TV RF Input



ON OFF

- Move the switch, on the right side of the meter, to the ON position for remote DC at TV RF input (5 Volt): the DC&RF IN LED will turn on (only where available).